

Quick Guide

Vaisala Boundary Layer View Software BL-View

New Installations

If you are installing BL-View for the first time, follow these instructions.

1 Log in to your computer with admin rights

2 Install BL-View

Insert USB drive to USB port.
Launch installation with EXE file.
Follow onscreen instructions.
Install to C:/Program Files (x86).

3 Activate software license

Follow onscreen instructions.
Use product key from cover letter.

i If the computer running BL-View is not connected to the internet, see *Vaisala Boundary Layer View Software BL-View User Guide* for instructions about activating the license.

4 Restart computer

5 Open BL-View: Start > All Programs > Vaisala

Installation complete



For further instructions, see *Vaisala Boundary Layer View Software BL-View User Guide*.

- BL-View software contains the online help (from 2.0 onwards).
- USB drive contains the online and PDF help.

The help content is identical in the PDF and online.



If you need assistance during installation, contact Vaisala technical support at www.vaisala.com/support.



Installation Updates

If you are updating from a previous BL-View version, follow these instructions.

1 Log in to your computer with admin rights

2 Back up data

i For BL-View 2.0 or newer, back up the netCDF files and continue from step 3.
For BL-View version 1.1 or older, back up the postgresql files.
Follow these steps:

Select **Start > Command Prompt**.

Type:

```
cd c:\BLView\Postgresql
```

Type folder name and file name:

```
take_backup.bat <backup folder path>\<backup file name>
```

! Do not save the backup file in:
C:\BLView or *C:\Postgresql*

3 Uninstall BL-View

Select **Start > Control Panel**.

Select **Programs and Features**.

Select **BL-View > Uninstall**.

Follow onscreen instructions.

Turn page - Follow New Installations